


BLUETOOTH SPEAKER MANUAL

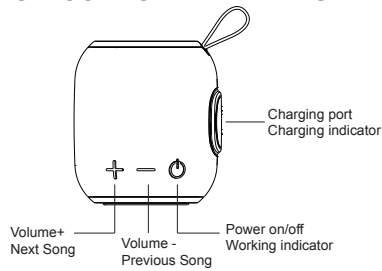

INSTRUCTIONS

1. Long press for power on and off, Short press it for pause and play.
2. Short press + to volume up, Long press it to next song.
3. Short press - to volume down, Long press it to previous song
4. Support twin speakers playing: Long press both speakers to power on
 - o If twin speakers connected before, they will automatically connect each other;
 - o If twin speakers NOT connected before, short press twice on any speaker, two speakers will turn into pairing mode. after pairing successfully, the main speaker will have pairing voice prompt;
 - o Short press twice on any of connected twin speakers to play as single speaker.
 - o Switch off your bluetooth device(eg. mobile) bluetooth setup before twin speakers connection, once twin speakers connected successfully, switch on your device's bluetooth setup and search for the twin speaker name for bluetooth connection.
5. RESET: When the speaker is on and stuck, push for 10 seconds to reboot the speaker.

FM0190 (F)

BASIC FEATURES

- Bluetooth play
- Water-proof

TROUBLE SHOOTING

- Cannot turn on the speaker: check if the speaker does not have power, if no power, charge it first
- Cannot connect with Bluetooth devices: check if speaker connected with the third Bluetooth device, if yes, disconnect it first, if still can not connect, reboot it and try again

CHARGING VIA USB CABLE

- Via USB cable, connect the speaker with the USB charger(output voltage 5V/output current no less than 0.5A, this accessory is not included) for charging;
- USB cable is for charging use only, not for data transferring;

SPECIFICATIONS

- Built-in rechargeable Li-ion Battery: 1800mAh
- USB charging Voltage: DC 5V/0.5A
- Speaker: 4 ohm 5W
- Frequency Range: 100 Hz-18KHz
- Distortion \leq 1%

INTERFACES


- USB Port: Power Charging
- LED indicator:
 - o Blue flash: Power On
 - o Red:charging status (red indicator off when Fully charged)

CAUTIONS

- Keep out of reach of children
- Never knock the speaker
- Keep it away from fire, high and low temperature
- Never block speakers nets
- Never open it by yourself
- Don't not charge it for too long time in case of damage to the battery, 5 hours is the best charging time

210910

蓝牙音箱使用说明书

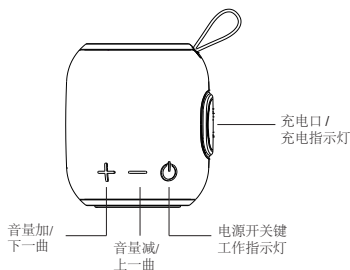

使用说明

1. 长按开关键可打开和关闭电源, 短按开关键, 可暂停或播放;
2. 短按加号键可调大音量, 长按可调下一首歌曲;
3. 短按减号键可调小音量, 长按可调上一首歌曲;
4. 支持对箱播放: 长按两个音箱的开关键, 即打开音箱, 要确保是开机的状态;
 - 如果音箱有连接过对箱的, 它们会自动连接;
 - 如果音箱未连接过对箱的, 请在任意一个音箱上双击开关键, 两个音箱将进入配对模式, 音箱会有配对成功的语音提示, 即配对成功;
 - 在两个已连接成对箱中, 任选一个音箱双击开关键, 可退出对箱模式;
 - 请注意, 在对箱连接之前, 请先关闭蓝牙设备(如: 手机)的蓝牙设置, 一旦对箱连接成功, 再打开蓝牙设备的蓝牙设置搜索对箱名称进行蓝牙连接播放音乐;
5. 重置: 当音箱工作的过程中被卡住, 按下电源开关键10秒钟重新启动音箱, 即可恢复正常。

主要性能

- 蓝牙播放
- 防水功能

FM0190 (F)

故障排除

- 音箱无法开机: 请检查音箱是否有电, 如果没有电, 请先充电。
- 无法连接蓝牙设备: 检查音箱是否已跟其它设备蓝牙连接, 如果被连接, 请先断开其它设备蓝牙连接, 如果不能连接, 重新启动它, 然后再试一次。

通过USB线进行充电

- 使用USB线连接音箱, 将对音箱进行充电。
- USB线仅用于充电使用, 不用于数据传输。

产品规格

- 内置可充电锂电池: 1800mAh
- USB充电: DC 5V/0.5A
- 扬声器: 4 ohm 5W
- 频率范围: 100 Hz-18KHz
- 失真度: \leq 1%

接口

- USB 端口: 电源充电
- LED 指示灯:
 - o 工作指示: 蓝色, 工作的状态
 - o 充电指示灯: 红色, 充电的状态 (充满电后红色指示灯熄灭)

注意事项

- 请将本品放在儿童接触不到的地方;
- 切勿敲击音箱;
- 远离火、高温或者低温;
- 请勿勿堵住音箱喇叭网孔;
- 不要自行拆开机器;
- 请勿长时间充电, 以免损坏电池, 5小时是最佳充电时间。

产品出厂时不配置电源适配器, 消费者若使用电源适配器供电, 则应购买配套使用获得音视频CCC认证的电源适配器, 适配器的输出电压为5VDC, 输出电流不低于0.5A

210910